


## POWER UNIT PARTS LIST

**CB748** 

June 2012

BD SKU #: 0201-0140, DP P/N# 1802045

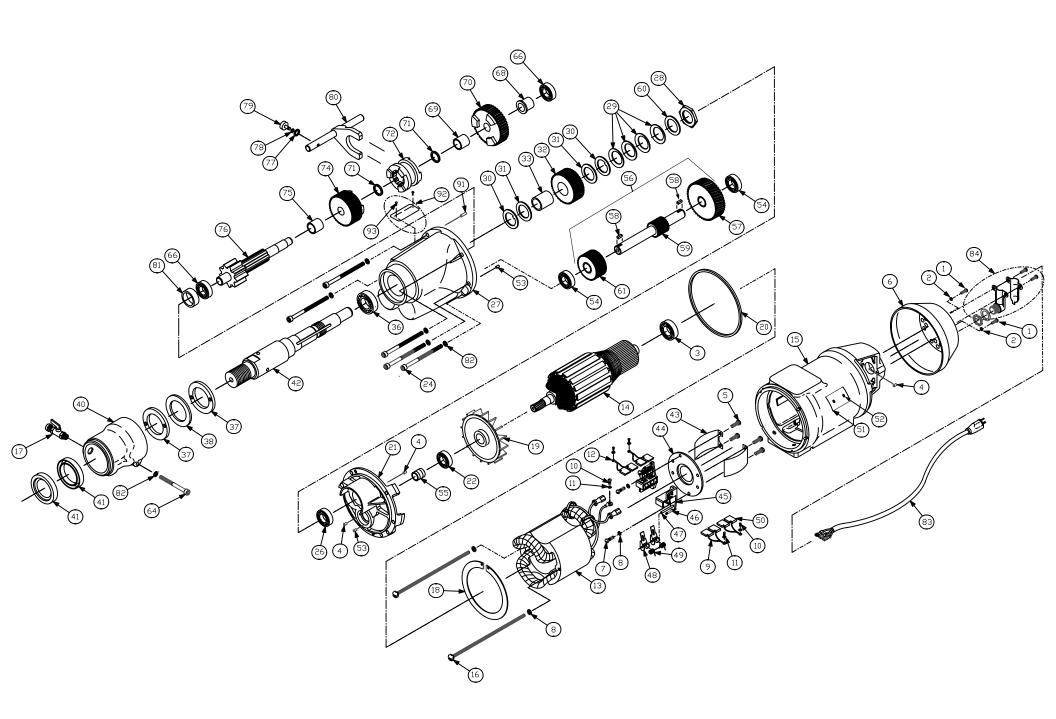

## CB748 Parts List Diamond Products

Diagram Part Qty. Diagram **Part** Qty. Description Description Number Number No. Req. No. Req. Screw 1st. Intermediate Gear Assy (Inc. #'s 57-59,61) Lock Washer, 1/4" 1st. Intermediate Gear Ball Bearing \*3 Key 1st. Intermediate Pinion Bearing Plug Screw Washer 1st. Intermediate Pinion Gearwheel Top Head Screw, #10-32 x 5/8" Capscrew, Soc Hd., 1/4"-28 x 2-1/4" Lock Washer, #10 **Ball Bearing** Insulator, Sleeve for Brush \*68 Pinion Sleave Screw, #8-32 x 5/16" Sleave Bearing (honed i.d. = .5625) Lock Washer, #8 2nd Intermediate Gear (Inc. #69) Lead Terminal Spring Ring 110V Field Clutch 220V Field 2nd Intermediate Gear (Inc. #75) 110V Armature Sleave Bearing 220V Armature 2nd Intermediate Pinion Field Case Washer Screw, #10-32 x 3/4" \*78 Belleville Washer Water Petcock Locking Screw Fan Baffle \*80 Shift Lever Rod Fan Bearing Sleave Lock Washer Wear Ring Gear Case Cover Cord \*22 **Ball Bearing** Cord Relief Screw Dowell Pin (In gear case) Roller Bearing Speed Indicating Plate (On gear case) Gear Case (Includes #81) Screw (Speed indicating plate) Nut \*29 Clutch socket (not shown) part number 2705145 Cone Lock Washer Keyed Washer **Thrust Washer** Lubrication: 10oz. (ML54-1) high temp. grease in gear case. Coat gears, Spindle Gear (Includes #33) inside of item 26, and pack all ball bearings. Sleave Bearing **Ball Bearing** Locking Washer 3. Assemble seal towards cummutator. Spring Washer Water Jacket Housing 22. Assemble with indent groove towards gear case, away from fan. \*41 Seal, Water Spindle 1-1/4-7 Thread 28. Torque to 100 ft/lbs, then adjust to allow spindle to slip at 140-150 ft/lbs. **Brush Insulator** Brush Holder Ring 29. Concave side faces keyed washer. Brush Holder (Incl. #46,#47) N/A Separate Brush Holder Assy (Incl. 46,47, 48,49) 41. Apply a small amount of grease to rubber seals before pressing together. Spring Retaining Pin Tension Arm Pin 51. Date code location. **Brush Tension Arm** 

**IMPORTANT!** To assure product **SAFETY** and **RELIABILITY**, repairs, maintenance, and adjustment should be performed by authorized Service Centers and always use genuine replacement parts

**Brush Spring** 

Brush & Lead

Name Plate

**Drive Screw** 

Bearing Plug

**Ball Bearing** 

Grease Sleave

\*51

2 Speed Super Power Unit
Model No. Type Volts Amps RPM
CB748 1 120 20 350/900

68. Assemble to 2nd intermediate pinion with large diameter towards gear.

78. Assemble with large side against item 77.

80. Apply a light amount of oil before assembling to unit.

## EQUIPMENT AND PARTS WARRANTY

Diamond Products warrants all equipment manufactured by it against defects in workmanship or materials for a period of one (2) year from the date of shipment to Customer.

The responsibility of Diamond Products under this Warranty is limited to replacement or repair of defective parts at Diamond Products' Elyria, Ohio factory, or at a point designated by it, of such parts as shall appear to us upon inspection at such parts, to have been defective in material or workmanship, with expense for transportation and labor borne by Customer.

In no event shall Diamond Products be liable for consequential or incidental damages arising out of the failure of any Product to operate properly.

Integral units such as engines, electric motors, batteries, transmissions, etc., are excluded from this Warranty and are subject to the prime manufacturer's warranty.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND ALL SUCH OTHER WARRANTIES ARE HEREBY DISCLAIMED.



310-05 35th Ave, Long Island City, NY 11106 (718) 204-9088 • (800) 777-0969 • Fax (718) 777-5210 www.BuildersDepot.com